

# Quick installation and programming guide



**ZERREKA** 

WARNING

This quick guide is a summary of the complete installation manual. The manual contains safety warnings and other explanations which must be taken into account. The installation manual can be downloaded by going to the "Downloads" section of Erreka website: http://www.erreka-automation.com



## **Electrical wiring**

- A: Main power supply
- B: Closing photocells
- C: Pushbutton / wall key
- D: LUMI flashing light
- E: Operator (motor / encoder)

## Assembly levels

**Level H**: the track should remain 10 cm above the highest point of the door (see detail **H**).

Total length (operator + guide) / working stroke:

- track ref. AMX01: 3,380mm / 2,788mm
- track ref. AMX02: 4,480mm / 3,888mm



P277A

P260B



#### **Electrical connections (panel VIVO-D102)**

#### **A** Disconnect the power supply before connecting or disconnecting any component.

■ The A.T., S and STOP devices must be voltage-free in order to prevent any damage to the control board.

