


LISTA DE REPUESTOS / SPARE PARTS LIST

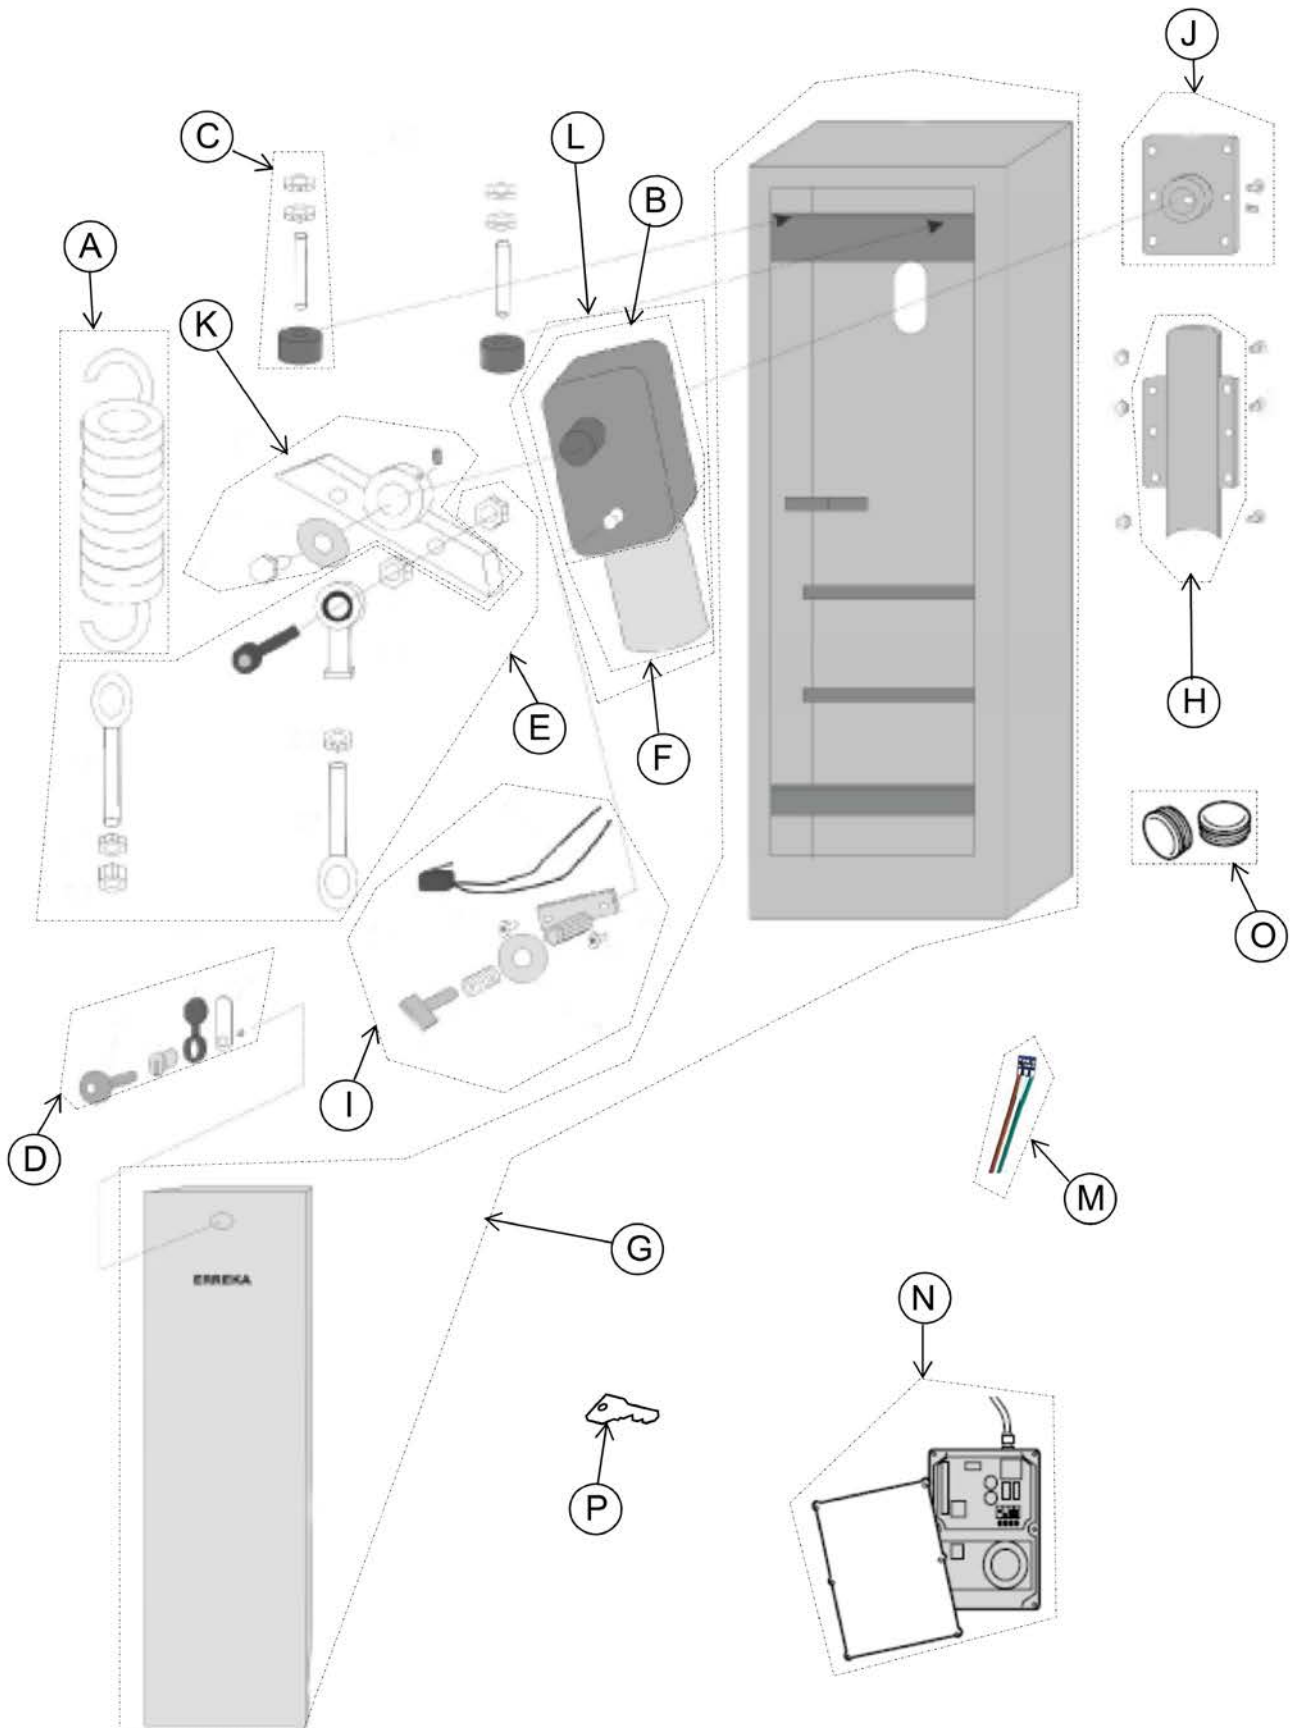

LISTA DE REPUESTOS / SPARE PARTS LIST

| | | NTS324E | NTS424E | NTS624E |
|---|--|----------------|----------------|----------------|
| A | MUELLE / <i>spring</i> | 08A003 | 08A004 | 08A005 |
| B | REDUCTORA / <i>gear box</i> | 66-VUNTBR0063 | | |
| C | TOPE RECORRIDO / <i>movement stopper</i> | 08B018 | | |
| D | BOMBILLO / <i>cylinder lock</i> | 08B019 | | |
| E | GRUPO TENSOR / <i>spring tensioner group</i> | 08B022 | 08B023 | 08B024 |
| F | MOTOR + EJE / <i>motor + shaft</i> | 66-VUNTBR0083 | | 66-VUNTBR0082 |
| G | CUERPO + TAPA / <i>barrier structure + cover</i> | 08B020 | | |
| H | TAPA PORTA ASTA CILINDRICA / <i>arm support flange</i> | 08A018 | | |
| I | MECANISMO DESBLOQUEO CON MICRO / <i>unlocking mechanism micro switch</i> | 08B008 | | |
| J | PORTA ASTA / <i>arm support</i> | 08B025 | | |
| K | BALANCIN / <i>balancing support</i> | 08B026 | | |
| L | MOTOREDUCTORA / <i>motor - gearbox</i> | 08B031 | | 08B032 |
| M | ENCODER / <i>encoder</i> | 25A089 | | |
| N | CUADRO (sin caja plástico) / <i>control box (without plastic box)</i> | 08B035 | | |
| O | TAPONES BARRA / <i>boom caps</i> | 08B027 | 08B028 | |
| P | LLAVE / <i>key</i> | 08A057 | | |