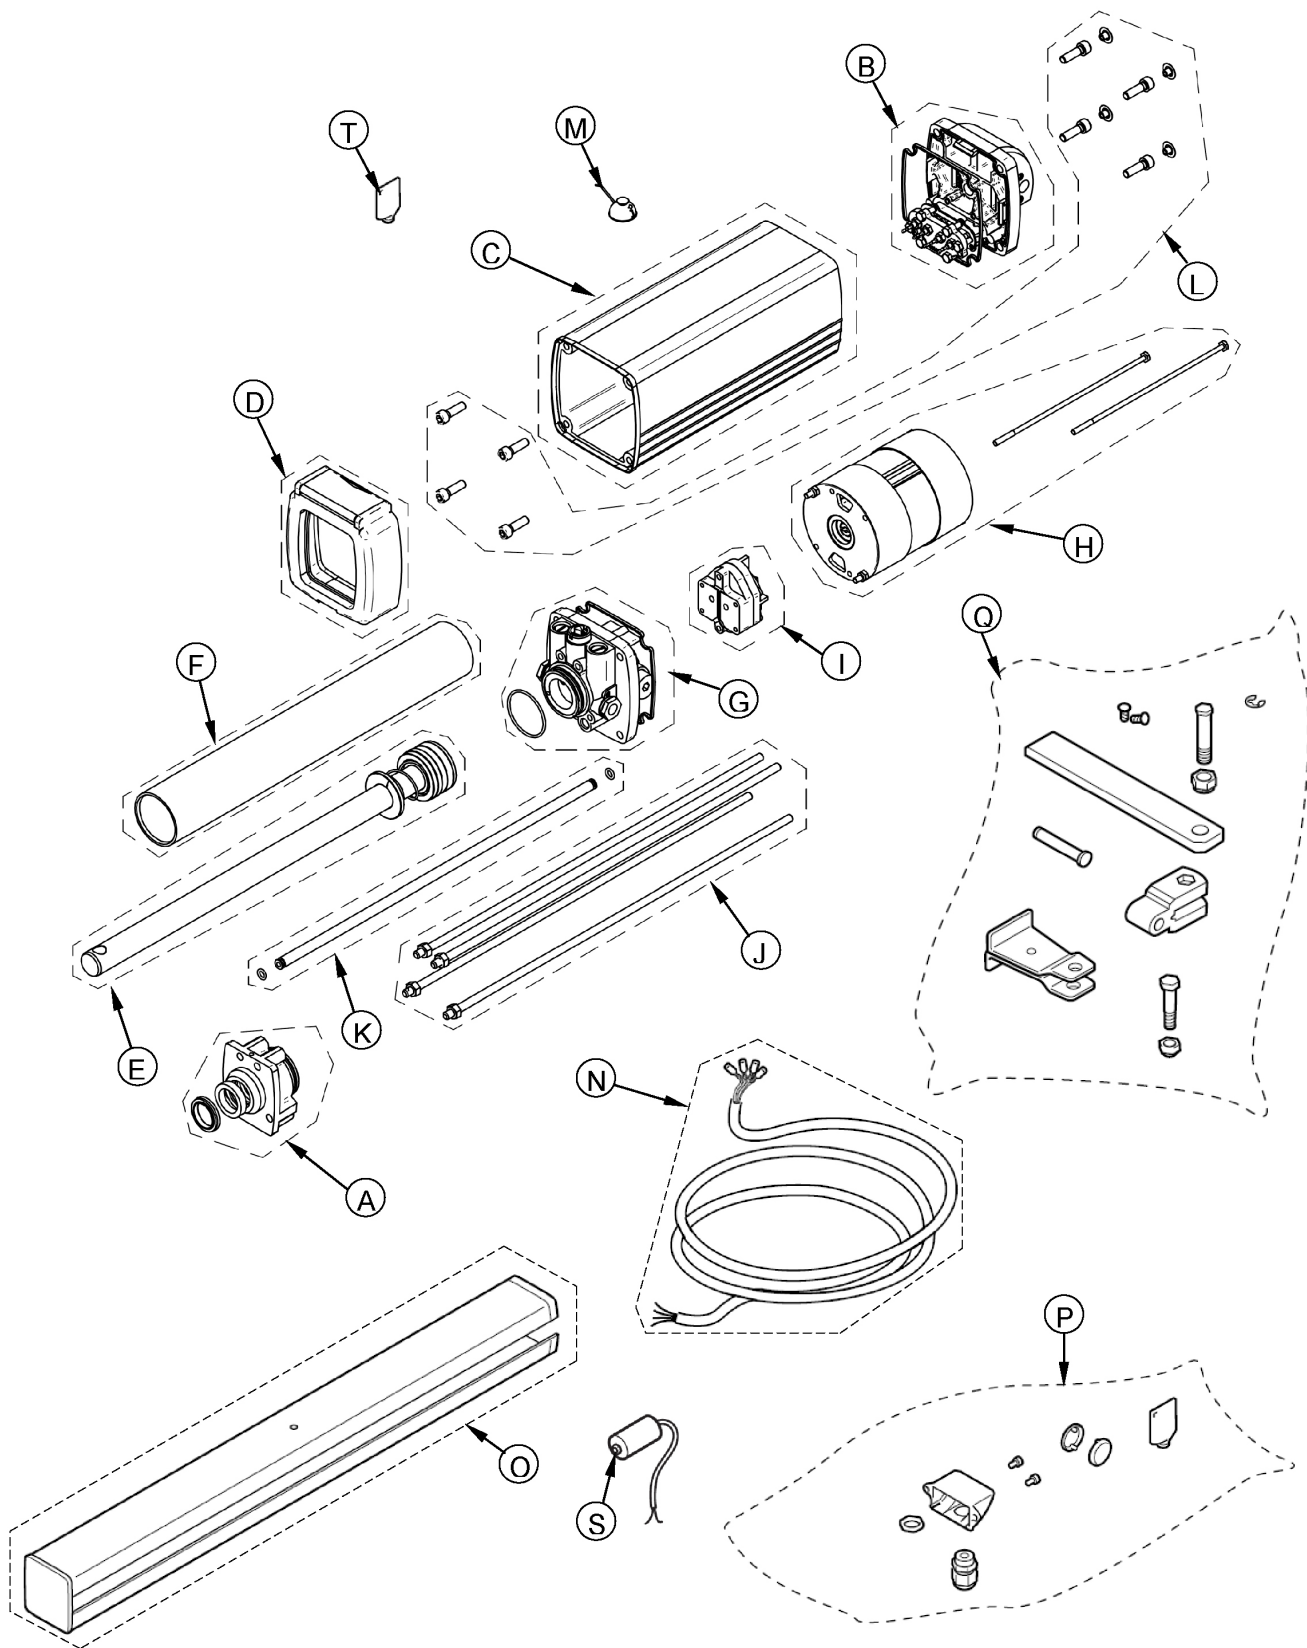


LISTA DE REPUESTOS / SPARE PARTS LIST

LISTA DE REPUESTOS / SPARE PARTS LIST

A	CONJUNTO TAPA DELANTERA / <i>Front cap ensemble</i>			02B286	
B	CONJUNTO TAPA TRASERA / <i>rear cap</i>			02B336	
C	TUBO EXTERIOR / <i>outside tube</i>			02B360	
D	CONJUNTO TAPA REGULADORES / <i>regulators cap ensemble</i>			02B325	
E	CONJUNTO VASTAGO + PISTON AMORT. HIDR. RESID. / <i>piston rod + soft stop piston</i>			02B361	
F	CAMISA CILINDRO / <i>cylinder</i>			02A568	
G	VALVULA / <i>valve</i>	BLOQUEADA / <i>dual lock</i>		02B289	
		NO BLOQUEADA / <i>not locked</i>		02B290	
H	MOTOR	BOMBA ENGRANES / <i>gear pump</i>	220V	1500RPM	02B287
				3000RPM	02B366
		125V	1500RPM	02B326	
			3000RPM	02B327	
		BOMBA LOBULOS / <i>lobe pump</i>	220V	1500RPM	02B274
				3000RPM	02B380
125V	1500RPM	02B381			
	3000RPM	02B371			
I	BOMBA / <i>pump</i>	ENGRANES / <i>gear pump</i>		02B291	
		LOBULOS / <i>lobe pump</i>	ESTANDAR / <i>standard</i>		02A559
			DOBLE CAUDAL / <i>double flow</i>		02A580
J	CONJUNTO VARILLAS / <i>rods ensemble</i>			02B362	
K	TUBO DE PRESION / <i>pressure tube</i>			02B352	
L	CONJUNTO TORNILLERIA / <i>bolts ensemble</i>			02B363	
M	ACEITE (5L) / <i>oil</i>	ESTANDAR (-15°C - 60°C) / <i>standard</i>		AVU05	
		PARA FRIO (-30°C - 90°C) / <i>cold environments</i>		AVU06	
N	CABLE 4 TERMINALES / <i>4 terminals wire</i>			02B220	
O	CONJUNTO FUNDA VASTAGO / <i>spindle cover</i>			02B364	
P	CONJUNTO TAPAS / <i>caps ensemble</i>			02B323	
Q	BOLSA HERRAJES / <i>supports ensemble</i>			02B324	
R	KIT JUNTAS / <i>seals kit</i>			02B365	
S	CONDENSADOR / <i>capacitor</i>	220V (10uF)		66-L 510-009	
		125V (25uF)		26A198	
T	LLAVE DE DESBLOQUEO / <i>unlocking key</i>			29A030	